

DMX	CH	名称	回路
1		1Bo	1
2			2
3			3
4			4
5			5
6			6
7		2Bo	1
8			2
9			3
10			4
11			5
12			6
13		1SUS	1
14			2
15			3
16			4
17			5
18			6
19			7
20			8
21			9
22		2SUS	1
23			2
24			3
25			4
26			5
27			6
28			7
29			8
30			9
31		1L	1
32			2
33			3
34			4
35			5
36			6
37		2L	1
38			2
39			3
40			4
41			5
42			6

DMX	CH	名称	回路
43		3L	1
44			2
45			3
46			4
47			5
48			6
49		4L	1
50			2
51			3
52			4
53			5
54			6
55		東西下(5L)	1
56			2
57			3
58			4
59			5
60			6
61		東西上(6L)	1
62			2
63			3
64			4
65			5
66			6
67		BFC	1
68			2
69			3
70			4
71			5
72			6
73			7
74			8
75			9
76			10
77			11
78			12
79		FC下	1
80			2
81			3
82			4
83			5
84			6

DMX	CH	名称	回路
85		FC下	7
86			8
87			9
88		FC上	1
89			2
90			3
91			4
92			5
93			6
94			7
95			8
96			9
97		BWC	1
98			2
99			3
100		WC下	1
101			2
102			3
103			4
104		WC上	1
105			2
106			3
107			4
108		GC下	1
109			2
110			3
111			4
112		GC上	1
113			2
114			3
115			4
116		1Bo	#R
117			#G
118			#B
119			#W
120			#EB
121		2Bo	#R
122			#G
123			#B
124			#W
125			#EB

DMX	CH	名称	回路
126		UH	#R
127			#G
128			#B
129			#W
130			#EB
131		LH	#R
132			#G
133			#B
134			#W
135			#EB
136		天反	1
137			2
138			3
139		客席(舞台側)	1
140			2
141			3
142		(客席側)	4
143	~512	空き	